



### Power Supply (AGY-020)

AGY-020 is a dedicated mains power supply for the agility soft start. In addition to allowing for mains control voltage operation, the power supply also allows for mains voltage digital control (D1/D2).

Fitting

Ensure terminals 24V, 0V, COM, D1 and D2 are fully open before installing power supply as shown below:

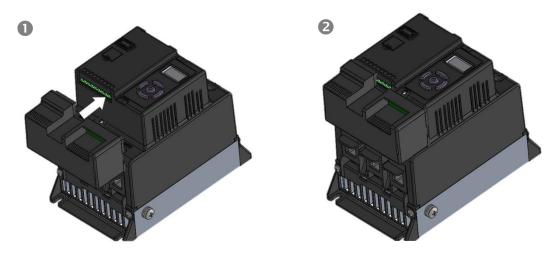

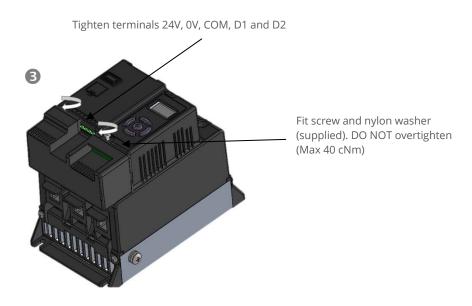




When the AGY-020 installation is complete, control supply, D1 and D2 are provided on the power supply rather than the agility main unit



#### **Connections**

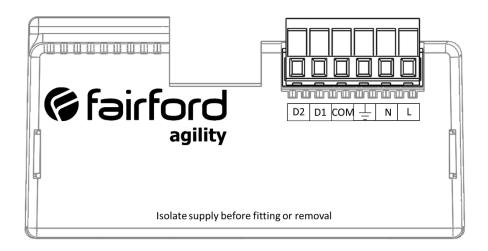

### **Control Terminal Functions**

Terminal	Description	Default	Function Selectable	Note
L	Control Supply Live (+Us)	-	No	#1
N	Control Supply Neutral –(Us)	-	No	
	Mains supply Earth	-	No	
COM	Digital Inputs Common	-	No	
D1	Digital Input 1	-	Yes	#2
D2	Digital Input 2	-	Yes	#2
13/14	Main Contactor Control (Run Relay)	-	No	#3
23/24	Top of Ramp Relay	-	No	#3


<sup>#1 110</sup>Vac or 230Vac, 47 – 63Hz

<sup>#2</sup> The voltage applied to the digital inputs D1 and D2 must be the same as the supply voltage.

<sup>#3 230</sup>Vac, 1A, AC15. 30Vdc, 0.5A resistive



# 3-Wire Control Using AGY-020

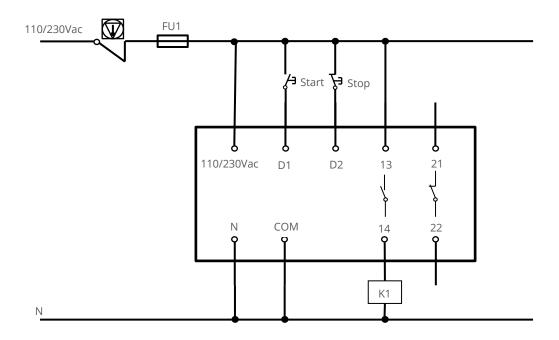

# 2-Wire Control Using AGY-020

