

# Copy Unit (KB-BDI/VDI)

The copy unit is used to copy an inverter parameter setup to another inverter. The copy unit saves time in applications with multiple inverters requiring the same parameter setup.

## Copy Unit dimensions

